

INSTALLATION INSTRUCTIONS FOR ITUGRAF SURFACE BRACKETS FOR 595 MM WIDE PANELS

1. Measure the positions of the brackets (2 per panel) according to Figure 2 and screw them to the ceiling. When installing a panel next to a wall or window, install the bracket so that the side with the spring faces away from the wall/window. The minimum distance between a bracket and wall should be 15 mm.
2. Lift one side of the panel up and align it with the spring. Make sure before doing so that the installation side is facing in the intended direction.
3. Push the side of the panel slowly against the spring so that the spring compresses.
4. Lift the other side of the panel against the ceiling and release the spring loading. Both sides of the panel should now be supported by the bracket.
5. After installation, you can move the panel vertically to adjust the position of its end.

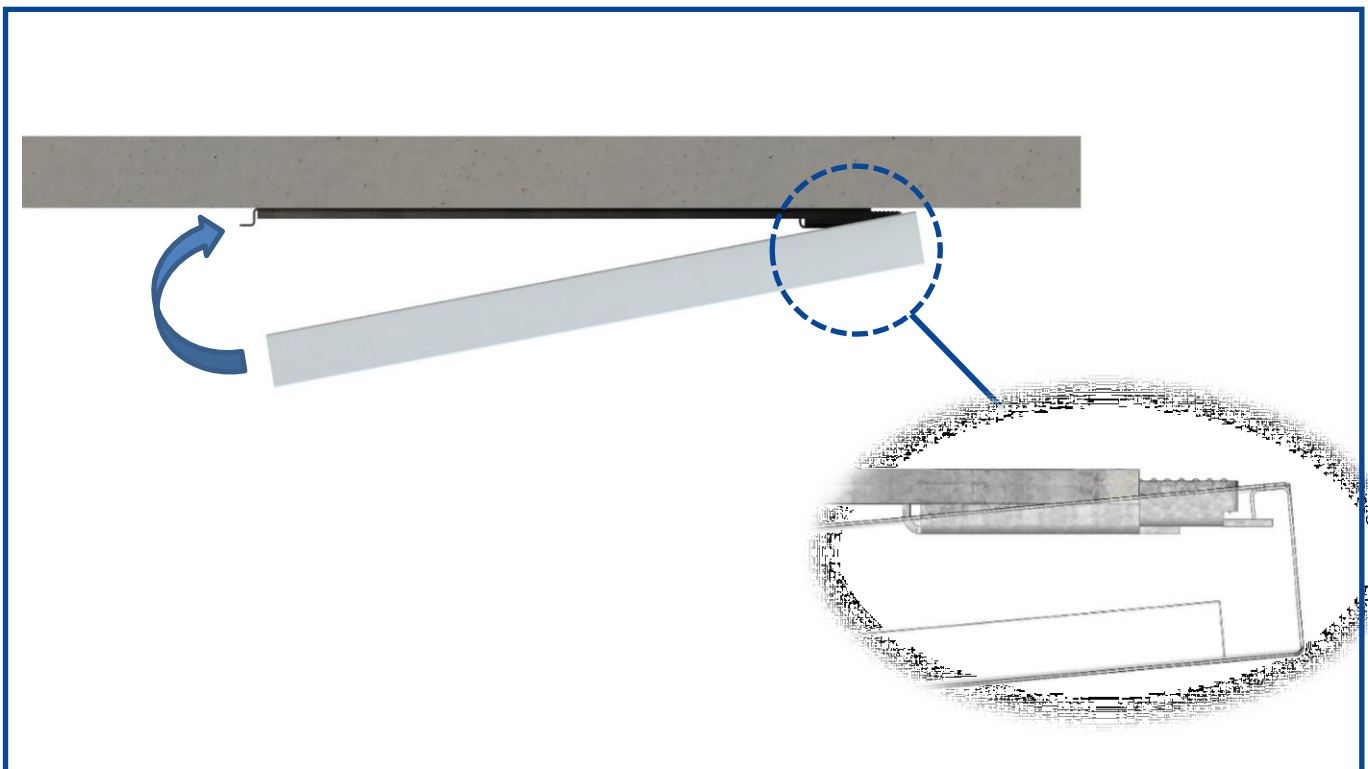


Figure 1: Installing an ItuGraf panel using a surface bracket



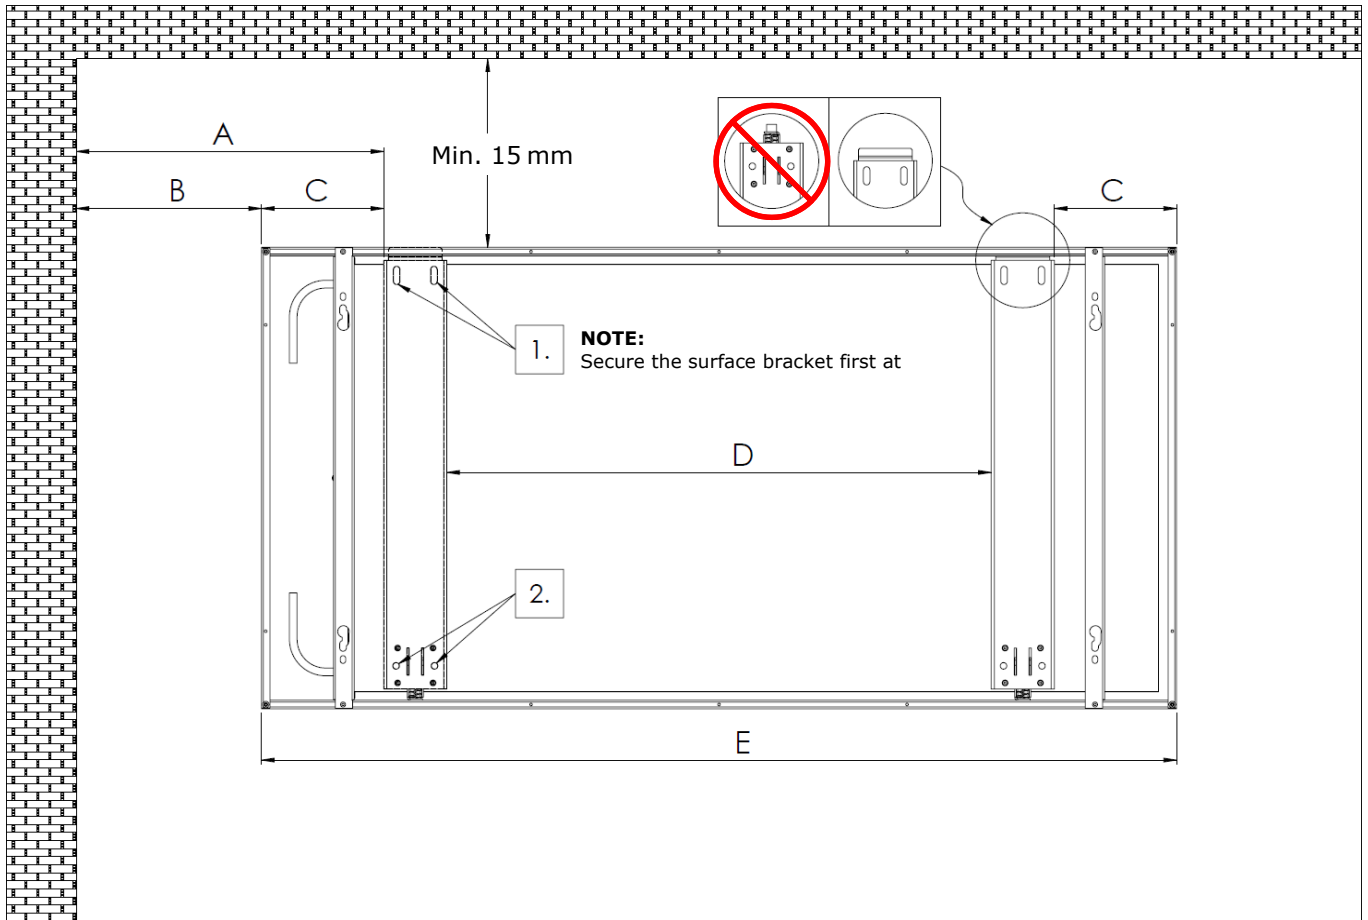


Figure 2: Dimensional drawing of ItuGraf surface bracket installation

SYMBOL	MEANING	VALUE (mm)
L		
A	Distance between bracket and wall	B + C
B	Distance between panel end and wall	

E	C	D
Panel length (cm)	Distance from end of panel (cm)	Distance between brackets (cm)
59	13	17
119	26	51
179	41	81
239	56	111
299	71	141

